



OUTWATER PLASTICS IND. INC

SUPER BRIGHT LED UNDER CABINET LIGHT

MODEL NO.: LED-L1TW

CAUTION:


These products may represent a possible shock or fire hazard if improperly installed or attached in any way. Products should be installed in accordance with these instructions, current electrical codes and/or the current National Electric Code(NEC).

NOTE:

Bulb is not replaceable.

SURFACE MOUNTING:

1. Locate desired position for the cabinet light.
2. Route the wire through surface ring notch, or if desired drill a hole through the mounting surface and route wires through hole. Be sure to position the surface ring so the notch faces the rear of the cabinet.
3. Mount surface ring and housing assembly with the two wood screws provided.
4. Route units wire to the power cord. CAUTION: Do not route wires through walls.
5. Not intended for permanent hardware installation inside built-in furnishings such as kitchen cabinets or trophy cases.
6. Do not conceal power supply cord (or power supply) inside a wall, ceilings, or floors.
7. Max. 100 pcs pucks can be linked together with the power cord.
8. Insert the plug of the power cord to nearest convenience outlet.

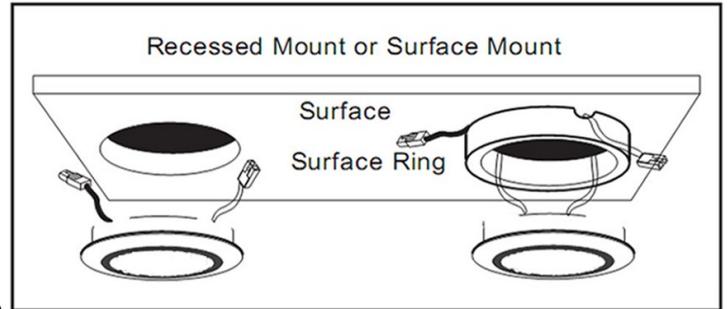

RECESSD MOUNTING:

1. Drill a 2-3/8 inch hole in the desired location.
2. Do not use surface can for recessed applications.
3. Feed wires through hole and push light housing into hole. Make sure there is no contact between the lamp, and the wire or any combustible material such as plastic or paper goods.
4. Route units wire to the power cord. CAUTION: Do not route wires through walls.
5. Max. 100 pcs pucks can be linked together with the power cord.
6. Insert the plug of the power cord to nearest convenience outlet.

IMPORTANT SAFETY INSTRUCTIONS: PLEASE SAVE!

This fixture has a polarized plug (one blade is wider than the other) as a safety feature to the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted. Do not alter the plug.

ADDITIONAL SAFETY MEASURES:

1. Use only insulated staples or plastic ties to secure cords.
2. Route and secure cords so that they will not be pinched or damaged when the cabinet is pushed to the wall.
3. Not intended for recessed installation in ceilings, or soffits.
4. Intended surface installation inside built-in furnishings such as kitchen cabinets, china cabinets or trophy cases.
5. The National Electrical Code (NEC) does not permit cords to be concealed where damaged to insulation may go unnoticed. To prevent fire danger, do not run cord behind walls, ceilings, soffits, or cabinets where it may be inaccessible for examination. Cords should be visually examined periodically and immediately replaced when and damaged is noted.