

# E-Z Slatwall

## INSTALLATION INSTRUCTIONS



### Tools Needed:

- Level
- Tape Measure
- Screw Gun
- Dry Wall Screws
- Adhesive
- Stud Finder (not shown)



### Step 1

Locate & mark stud.



### Step 2

We recommend using quality adhesive on both contact surfaces.



### Step 3

With tongue side up, use level to position first slatwall.



### Step 4

Secure slatwall in place by using drywall screws. Repeat steps until you have reached desired height.



**Tip:** For a finished look, use screw cover caps to conceal screws.

## Strength Grades of Installation from which to choose:

### 1 - Standard Duty Strength:

Use drywall screws for **Standard Duty** Strength Installation. Rated at 5 lbs per square foot maximum. Based on 5" deep shelf.


### 2- Heavy Duty Strength:

Use a quality adhesive and screws for a **Heavy Duty** Strength installation. Rated at 10 lbs per square foot maximum. Based on 10" deep shelf.


We recommend using a quality adhesive, screws and part number **ALU710** on page 109 for a heavier application.



Press metal insert into groove

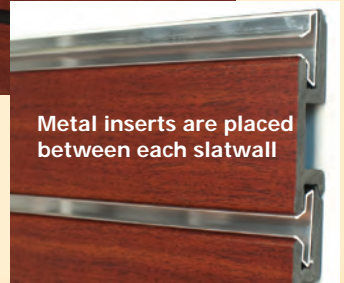

Metal inserts are placed between each slatwall

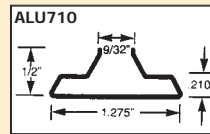

**OUTWATER PLASTICS INDUSTRIES, INC.**

24 River Road, P.O. Box 500, Bogota, NJ 07603-0500

Phone: 1-800-631-8375 Fax: 1-800-888-3315 www.outwater.com